

MOUNTING POSITIONS

1. Mounting positions

The mounting position of the gear unit identifies its space orientation. B3 mounting position, as from a technical point of view, ensures lower oil splash, better lubrication and less heating.

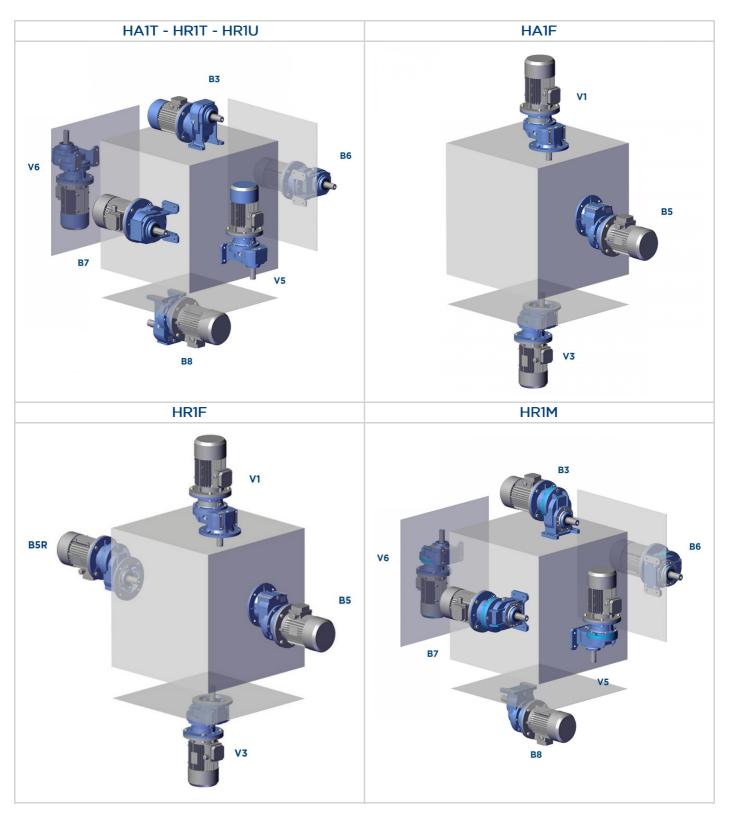

MOUNTING POSITIONS

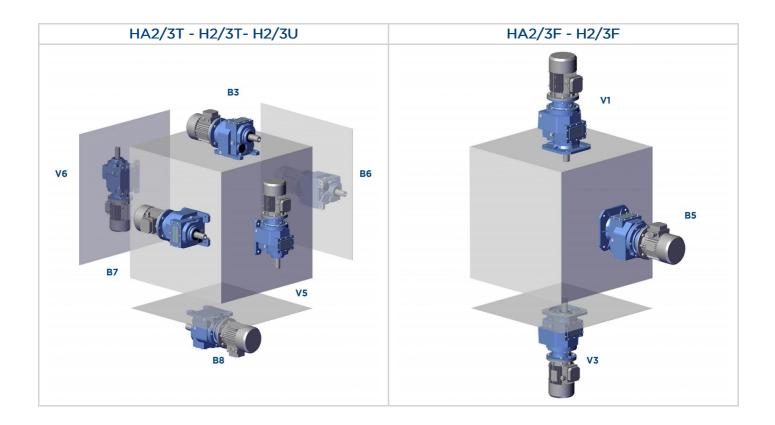

2. Position of terminal box

Unless otherwise specified when ordering, the gear reducer is supplied with terminal box in position 1.

