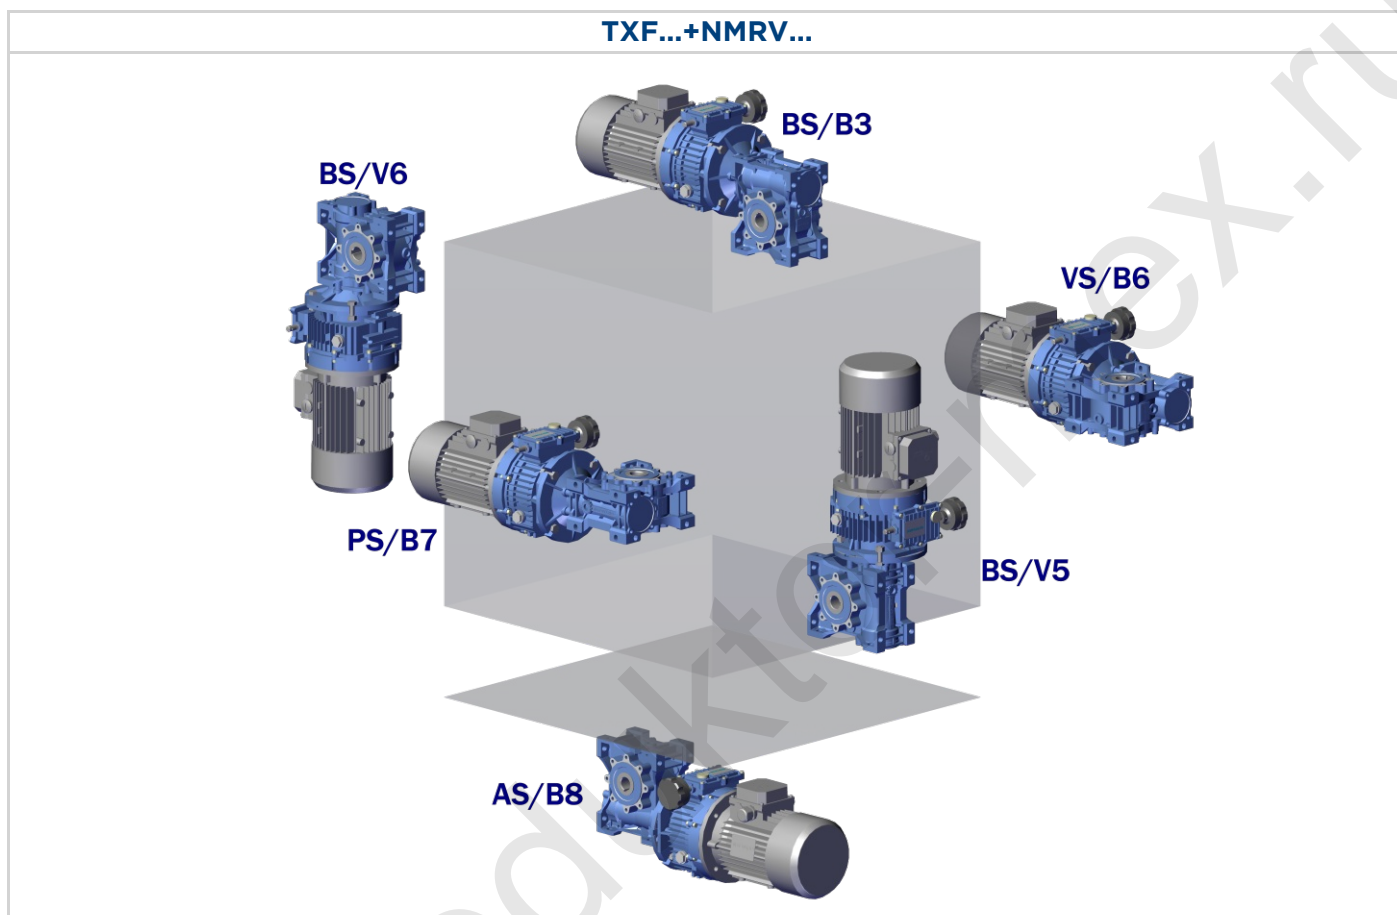


14.2 MOUNTING POSITIONS

14.2.1 Mounting positions

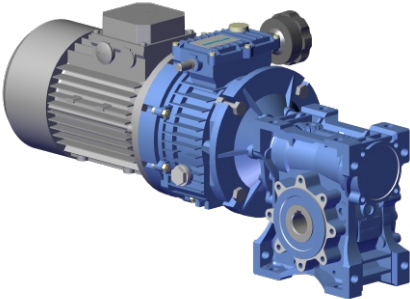
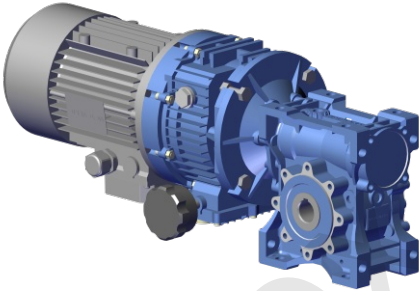
The mounting position of the variator unit identifies its space orientation. B3/B5 mounting position, as from a technical point of view, ensures lower oil splash, better lubrication and less heating.

N.B.: When ordering, please always specify execution and mounting position.



14.2 MOUNTING POSITIONS

Execution TXF...+NMRV...

BS	AS
	
VS	PS
