
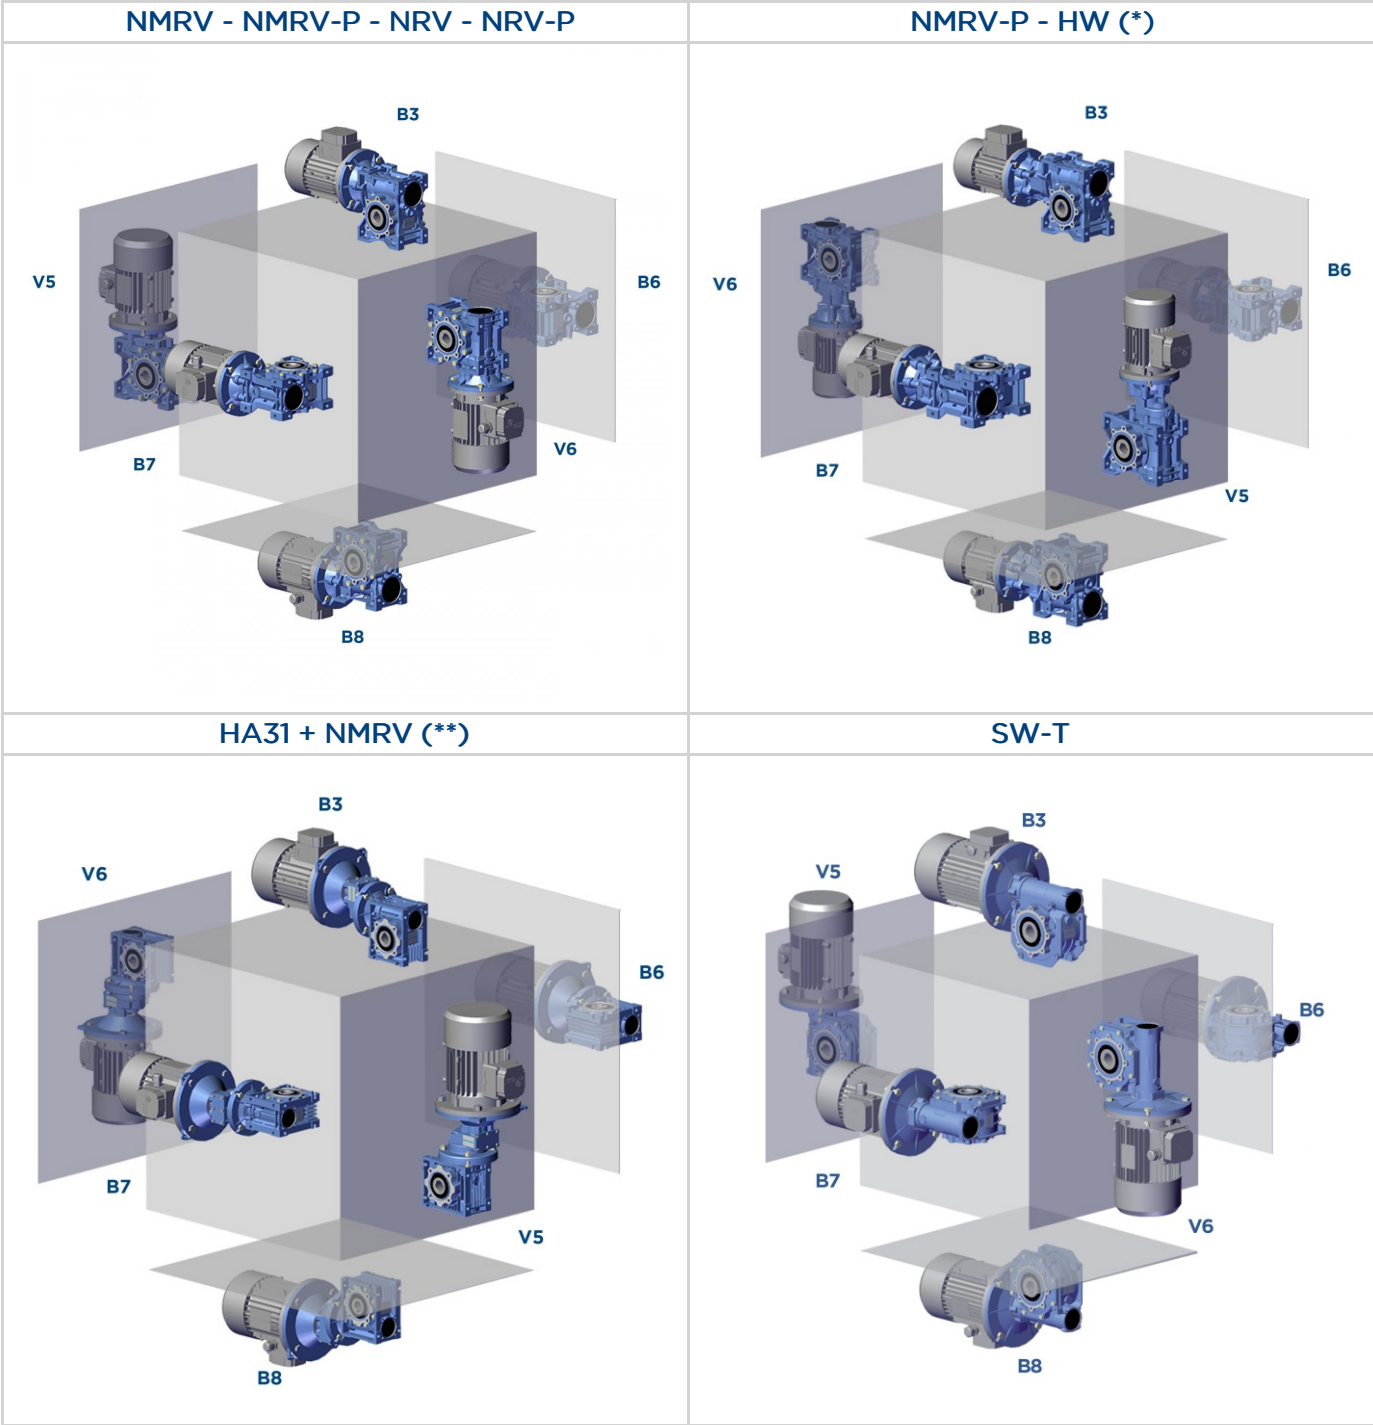
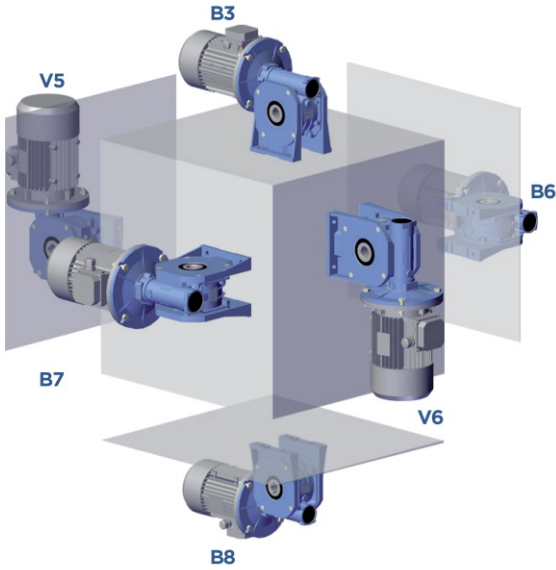
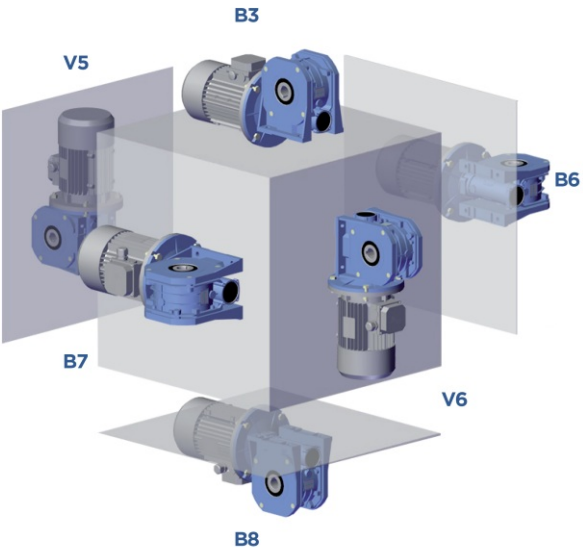
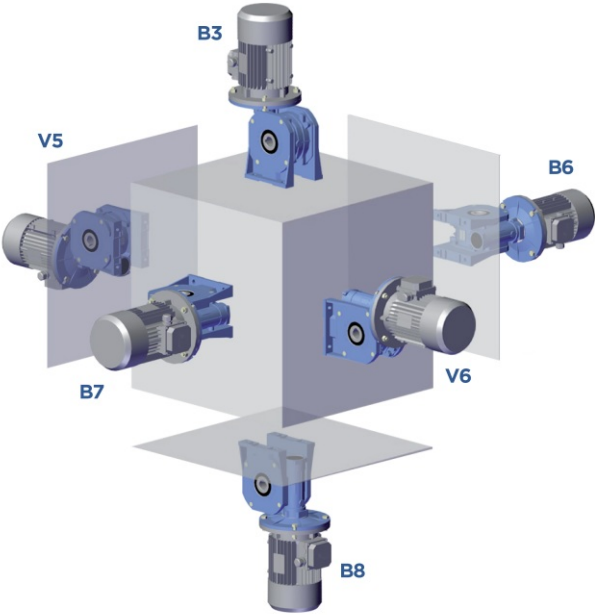


1. Mounting positions


The mounting position of the gear unit identifies its space orientation. Unless specified otherwise, the standard positions are B3/BS. B3 mounting position, as from a technical point of view, ensures lower oil splash, better lubrication and less heating. For positions not envisaged, it is necessary to call our Technical Service. “U” version is related to sizes from NMRV/NMRV-P/SW 025-075 and NRV/NRV-P/SW 030-063. For these sizes it is not necessary to specify mounting position. For NMRV/SW 090-105-110 mounting position B3 is valid also for B6-B7-B8. Mounting positions V5 and V6 must be specified. For NMRV 130-150 mounting positions B3-B6-B7-B8-V5-V6 must be specified.  
(\*NMRV-P - HW) Execution only in BS. For NMRVpower/HW 063-075 mounting position B3 is valid also for B6-B7-B8-V6. Mounting position V5 must be specified.  
(\*\*HA31+NMRV/SW) The mounting position is U and it is valid for all mounting positions.

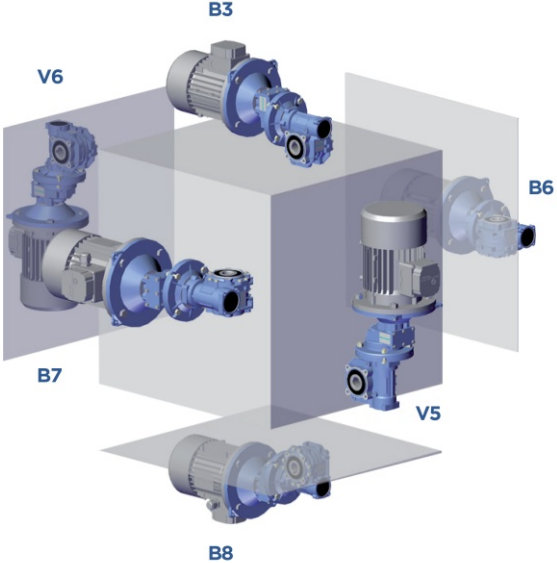

<p>SW-PA/PAS</p> 	<p>SW-PB/PBS</p> 
<p>SW-PV/PVS</p> 	<p>HA31 + SW (**)</p> 

Execution

NMRV/NMRV-P+NMRV/NMRV-P - NRV/NRV-P+NMRV/NMRV-P

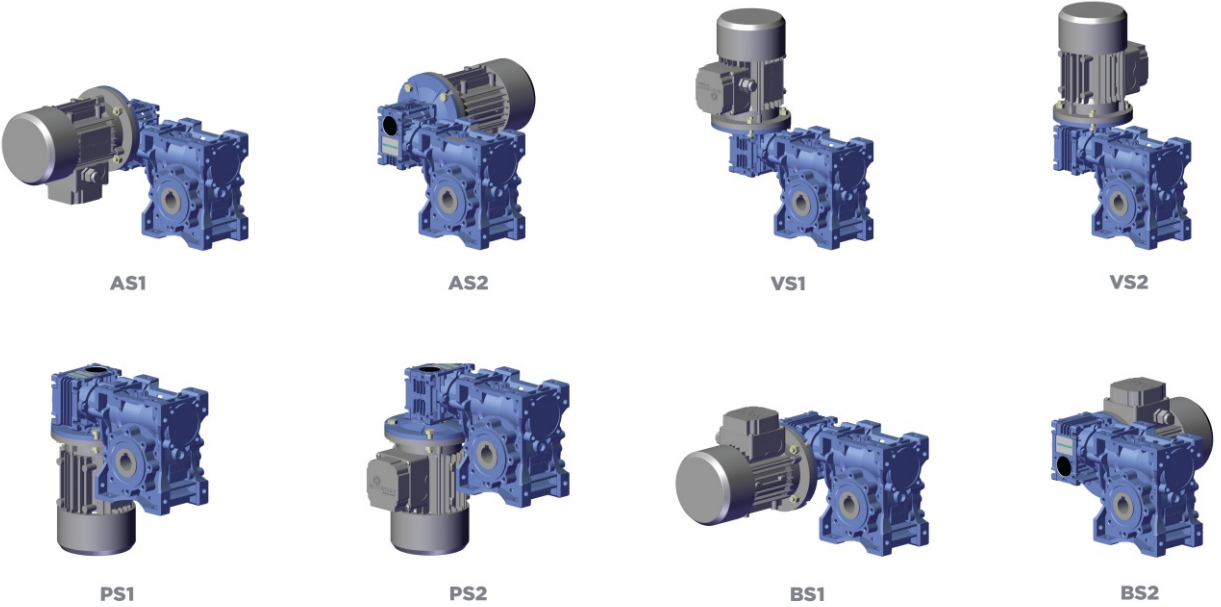

HA31+NMRV



## Execution


## SW+SW - ISW+SW




AS1




AS2

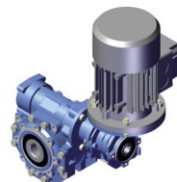

VS1

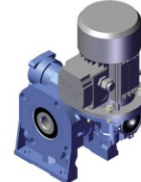


VS2

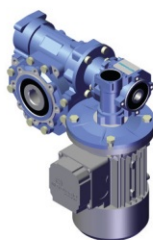

PS1



PS2

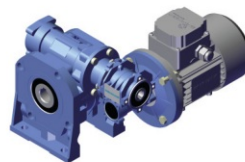

BS1



BS2

## HA31+SW



BS



AS



VS




PS

## 2. Position of terminal box

In the case of specific requirements, when ordering, specify the position of the terminal box as shown in the diagram. Unless otherwise specified, the gear reducer is supplied with terminal box in position 1. Terminal box position always refers to HA31 position.

## NMRV - NMRV-P - SW

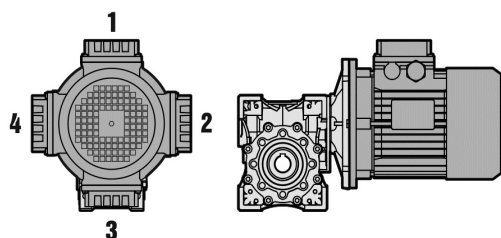

## HA31+NMRV/SW

